

предварительного инструктажа по безопасной эксплуатации устройства, в ходе которого будут осознаны риски, связанные с использованием данного оборудования. Устройство – не детская игрушка! Чистка и техническое обслуживание устройства детьми без сопровождения не допускается.

6. ВНИМАНИЕ! Популярные аквариумные препараты, содержащие малахитовую зелень и/или метиленовую синь, могут оставлять трудноудалаемые пятна на силиконе, используемом при изготовлении аквариумных ёмкостей из наборов GLOSSY WHITE. Применение таких препаратов не рекомендуется.

МОНТАЖ И ТЕХНИЧЕСКОЕ ОБСЛУЖИВАНИЕ. В светильных модулях LEDDY TUBE, установленных в наборах GLOSSY, используются современные светодиодные технологии. Мощные светодиоды излучают свет с цветовой температурой 6500 K (SUNNY). Такое освещение обеспечивает оптимальные условия для роста аквариумных растений, а также гарантирует точную передачу окраски всех обитателей аквариума. Дополнительно можно приобрести модуль PLANT с цветовой температурой 8000 K, специально предназначенный для водных растений.

Способ установки светильного модуля в крышку аквариума показан на рис. 2. Модуль требует технического обслуживания. В случае необходимости его поверхность можно очистить от пыли с помощью чистой, сухой тряпочки.

Стекни аквариума следует очищать мягкой тканью, губкой или специальным аквариумным очистителем. В случае наборов GLOSSY WHITE, изготовленных из стекла OPTI, следует сбирать особую осторожность, так как такое стекло легко царапается, а царапины, возникшие в результате неправильной чистки, отчайчиво заметны на его поверхности.

ДЕМОНТАЖ И ЛИКВИДАЦИЯ. Использованное электрическое и электронное бытовое оборудование нельзя выбрасывать в мусорные ящики. Селекция, сбор и надлежащая утилизация отходов такого типа оберегает ценные ресурсы окружающей среды. Пользователь несет ответственность за доставку использованного оборудования в специализированный пункт сбора, где его примут бесплатно. Информацию о таких пунктах можно получить в пункте продажи или сервисном пункте изготовителя.

ГАРАНТИЙНЫЕ УСЛОВИЯ. Изготовитель предоставляет гарантию на срок 24 месяцев, считая от даты продажи. Гарантия распространяется на повреждения, возникшие по вине изготовителя, т.е. дефекты материалов или ошибки при заводской сборке. Гарантия распространяется только на устройство и не предусматривает ответственности за правильное функционирование и стабилизированное аквариума и аквариумного рабочего. Гарантия не распространяется на повреждения, возникшие из-за неправильной эксплуатации устройства или использования не по назначению. Внимание! Любые попытки внесения конструкционных изменений или разборки устройства, выходящие за пределы его нормальной эксплуатации или ухода, блекнут за собой потерю гарантии! В случае обнаружения неправильной работы устройства, необходимо высылать его вместе с заполненным продавцом гарантинным талоном по адресу изготовителя или дистрибутора. Условием принятия гарантии является соответствие даты изготовления, указанной на продукте, дате, указанной на гарантинном талоне. Настоящие гарантийные условия не исключают, не ограничивают и не приостанавливают прав покупателя, вытекающих из несоответствия товара условиям договора. Гарантия ограничена восстановлением или заменой устройства и не обеспечивает последствий потери или уничтожения, каких-либо других элементов/ресурсов и т.п. произошедших вследствие работы устройства.

Пункты приема на гарантийный ремонт:
г. Москва пр-т Мира д. 182, тел. 8 (495) 971-29-87
г. Москва ул. Вешняковская д. 24А, тел. 8 (495) 971-29-87
г. Санкт-Петербург наб. реки Фонтанки д. 99, тел. 8 (812) 310-29-91
г. Екатеринбург ул. Шаумяна д. 100, тел. 8 (982) 613-26-91
vk.com/waterpet
e-mail: aquael-service@yandex.ru

ES MANUAL DE USO

Estimados Señores, gracias por comprar nuestro producto. Estamos seguros que estarán satisfechos. Para evitar cualquier problema relacionados con su uso, por favor, lean atentamente este manual.

USO PREVISTO Y PROPIEDADES DEL PRODUCTO. Los conjuntos GLOSSY se componen de un depósito especialmente elevado en su interior, con tapa dotada con conjunto de iluminación. Gracias a esta solución innovadora, se ha obtenido el efecto de una figura de vidrio monolítica, acabado con una elegante cinta, en su parte superior. Los conjuntos GLOSSY se adaptan perfectamente a cualquier interior moderno, siendo un elemento decorativo original. Las tapas de estos conjuntos están equipadas con modernos focos de iluminación LED, que garantizan el desarrollo correcto de las plantas y un aspecto natural del interior de la pecera. Los conjuntos GLOSSY 80 y GLOSSY 100 incluyen dos módulos de iluminación de bajo consumo. Se pueden añadir otros dos módulos, si fuese necesario. Los conjuntos GLOSSY 120 y GLOSSY 150 incluyen tres módulos de iluminación de bajo consumo, con la posibilidad de añadir un cuarto módulo, si fuese necesario. Gracias a estos módulos de iluminación, los costes de alumbrado de la pecera se reducen en un 50% y no es necesario cambiar las lámparas. En la parte inferior de la tapa, hay dos orificios de montaje. Estos orificios permiten montar cualquier recipiente de filtro y otros dispositivos complementarios, para peceras.

Los conjuntos GLOSSY son ideales para crear peceras con plantas, peceras y terrarios bióticos, así como, típicas peceras decorativas. Los conjuntos se ofrecen en cuatro tamaños, desde 80 hasta 150 cm de largo (volumen desde 125 hasta 405 l). Cada conjunto GLOSSY puede complementarse con un armario especial, con el mismo estilo. El conjunto GLOSSY, con su armario, forma una elegante y compacta figura que llama la atención por su elegancia.

Los conjuntos GLOSSY WHITE se fabrican con vidrio tipo "OPTI" (transparencia aumentada), pegado con silicona blanca.

CONDICIONES PARA UN USO SEGURO. El dispositivo adquirido ha sido fabricado atendiendo todas las normas de seguridad actuales, aplicables en todo el territorio o la Unión Europea. Por favor, lean atentamente estas condiciones de seguridad, para un uso seguro y duradero del dispositivo:

1. El dispositivo está diseñado para su uso en espacios cerrados, solamente para fines previstos.
2. El dispositivo debe ser conectado a red eléctrica con tensión nominal indicada en el mismo.
3. El cable de alimentación no puede ser sustituido. Si el cable queda dañado, el dispositivo debe ser desecharado.

4. ADVERTENCIA: Antes de realizar las tareas de mantenimiento del equipo de la pecera o estanque, desconectar el enchufe o apagar el dispositivo.

5. Este equipo puede ser utilizado por niños mayores de 8 años y personas con reducida capacidad física y mental, así como, personas sin experiencia y conocimientos acerca del dispositivo, si se mantiene el control o instruye previamente a estas personas, en cuanto al uso seguro del mismo y los riesgos inherentes a su uso. Los niños no pueden jugar con este equipo. Los niños no pueden realizar las tareas de limpieza y mantenimiento sin la supervisión de un adulto.

6. ¡ATENCIÓN! En el caso de los conjuntos GLOSSY WHITE, los productos más populares para peceras, que contengan verde malachite o/azul de metileno pueden provocar una decoloración permanente de la silicona usada, para el pegado del recipiente. Se recomienda no utilizar este tipo de productos.

MONTAJE Y MANTENIMIENTO. Los módulos de iluminación LEDDY TUBE, montados en los conjuntos GLOSSY, recurren a la moderna tecnología de diodos LED. Los diodos LED emiten una luz, con temperatura de color 6500 K (SUNNY). Este tono es óptimo para las plantas de la pecera y refleja fielmente los colores de todos sus habitantes. Complementariamente, se pueden montar módulos accesorios, especialmente adaptados a las necesidades de las plantas marinas. Estos módulos PLANT emiten luz, con temperatura de color 8000 K.

La imagen 2 presenta el método de montaje del módulo, en la tapa del conjunto de pecera. El módulo no requiere tareas de mantenimiento. Si fuese necesario, limpiar el polvo de su superficie, usando un trapo suave. Los laterales de la pecera deben limpíarse con un trapo suave, esponja o limpiador especial para peceras. Los conjuntos GLOSSY WHITE deben tratarse con especial cuidado, ya que el vidrio tipo "OPTI" resulta especialmente propenso a roces. Cualquier raya en su superficie, causada por un producto de limpieza, resulta muy visible.

EL DESMONTAJE Y LA CASACIÓN. El equipo eléctrico y electrónico desgastado no se debe tirar a la basura. La selección y el reciclaje correcto de estos aparatos ayuda a proteger el medio ambiente. El usuario es responsable de suministrar el aparato desgastado a un punto de recogida, donde será depositado gratuitamente. La información sobre los puntos de recogida se puede obtener de las autoridades locales o en los puntos de venta.

LAS CONDICIONES DE GARANTIA. El productor concede una garantía por el período de 24 meses desde la fecha de la compra. La garantía abarca las averías causadas por el productor, es decir defectos del material o de montaje. La garantía no abarca deterioros resultado del uso indebido del aparato o también su uso de forma diferente a la que está destinado. Atención: cualquier intento de transformación o desmontaje del aparato que excede el uso normal y la conservación del aparato provocan la pérdida de la garantía! En caso de determinar irregularidades en el funcionamiento del aparato hay que enviarlo junto con la tarjeta de garantía sellada a la dirección del vendedor o del productor. La condición de aceptar la garantía es la concordancia entre la fecha de la producción impresa en el aparato y la fecha inscrita en la tarjeta de garantía. Estas condiciones no excluyen, limitan ni suspenden los derechos del comprador resultantes de la falta de concordancia del producto con el contrato. Esta garantía tiene validez únicamente si se presenta un comprobante de compra. La garantía se limita únicamente a la reparación o al reemplazo del aparato y no cubre perdidas ni danos resultantes de los objetos animados o inanimados.

IT MANUALE

Gentili Signori, grazie per aver acquistato il nostro prodotto. Siamo sicuri che sarete soddisfatti di suo funzionamento. Per evitare eventuali problemi associati con il suo uso, Vi preghiamo di leggere prima attentamente le seguenti istruzioni.

SCOPO E CARATTERISTICHE DEL PRODOTTO. Set GLOSSY consistono in una speciale serbatoio più alto, all'interno del quale è incollato il copertino con la luce. Grazie a questa innovativa soluzione unica si è ottenuto l'effetto di un elegante corpo in vetro rifinito con garantisce, vetro solido unificato, sommerso da un elegante nastro. Set GLOSSY perfettamente si compongono con interni moderni e costituiscono un elemento originale della decorazione. I copertini del kit sono muniti di illuminazione a LED moderna, che garantisce il corretto sviluppo delle piante e aspetto naturale dell'interno del serbatoio. I set GLOSSY 80 e GLOSSY 100 include due moduli di illuminazione a risparmio energetico, e gli altri due possono essere aggiunti secondo le necessità. Il set GLOSSY 120 e GLOSSY 150 include tre moduli di illuminazione a risparmio energetico, il quarto può essere aggiunto secondo le necessità. L'applicazione di questi moduli di illuminazione dell'acquario riduce il costo di energia elettrica di 50% ed elimina la necessità di frequenti ricambi delle lampade.

Nella parte posteriore del copertino sono appositi fori di montaggio. Essi consentono di installare liberamente qualsiasi cartuccia del filtro e altre attrezature dell'acquario. Kit GLOSSY sono ideali per la creazione di contenitori per le piante dell'impianto, biotopo e acquari sociali tradizionali. Sono disponibili in quattro dimensioni di 80 a 150 cm di lunghezza (capacità di 125-405 l). Per ogni set, GLOSSY è possibile comprare un armadio speciale nello stesso stile. Il gruppo GLOSSY assieme con il mobile crea una struttura elegante compatta, ed elegantsima.

Set GLOSSY WHITE sono eseguiti in vetro tipo "OPTI" (trasparenza maggiore) laminato con silicone bianco.

CONDIZIONI PER USO SICURO. Il nuovo dispositivo è stato prodotto secondo le norme di sicurezza vigenti nell'Unione europea. Per la sua lunga durata e sicuro utilizzo, si prega di leggere le seguenti condizioni di sicurezza:

1. Il dispositivo è progettato per l'uso in ambienti chiusi solo ed esclusivamente per lo scopo previsto.
2. Il dispositivo può essere alimentato solo dalla rete elettrica con tensione nominale indicata sullo stesso.
3. Cavo di alimentazione, fissi, non può essere sostituito. Se il cavo è danneggiato, il dispositivo diventa inutile.
4. ATTENZIONE: Prima di eseguire la manutenzione del materiale che si trova in acquario o in piscina nel giardino si deve scollegare dalla rete di alimentazione tutto materiale sotto tensione.
5. Questo dispositivo può essere utilizzato da bambini di età minima di 8 (otto) anni e da parte di persone con ridotte capacità fisiche, mentali e con la mancanza di esperienza e conoscenza del dispositivo, se verrà fornita assistenza o formazione per l'uso delle attrezture in modo sicuro e comprendesi i rischi associati. I bambini non dovrebbero giocare con il dispositivo. I bambini non possono eseguire le operazioni di manutenzione oppure di pulizia del dispositivo senza la sorveglianza da parte delle persone adulte.
6. NOTA! Nel caso di set di GLOSSY WHITE preparati popolari per acquario contenendo malachite verde e/o blu di metilene che possono causare decolorazione permanente della silicona utilizzata per la costruzione del serbatoio. Si consiglia l'uso di essi.

MONTAGGIO E MANUTENZIONE. Moduli di illuminazione LEDDY TUBE installati in set GLOSSY sfruttano la moderna tecnologia a LED. Potenti ledi LED emettono la luce con una temperatura di colore di 6500 K (SUNNY). Ciò fornisce buone condizioni per le piante aquatiche e garantisce l'accuratezza dei colori di tutti i abitanti dell'acquario.

Inoltre come accessori opzionali sono disponibili moduli dedicati alle piante aquatiche PLANT, con una temperatura di colore di 8000 K. La modalità di montaggio del modulo nel copertino dell'acquario è stato presentato in Fig. 2. Il modulo non necessita di alcuna manutenzione. Se necessario, la superficie deve essere spolverata con un panno asciutto e pulito.

Il vetro del serbatoio deve essere pulito con un panno morbido o una spugna, o un detergente specializzato dedicato ai acquari. Si deve procedere con particolare cautela nel caso degli insiemni GLOSSY WHITE eseguiti in vetro tipo "OPTI", perché il vetro è particolarmente suscettibile ai graffi, e le eventuali fessurazioni sorto a seguito delle operazioni di pulizia eseguita con poca cura sono ben visibili sulla sua superficie.

SMONTAGGIO E SMALTIMENTO. Le apparecchiature elettriche ed elettroniche usate non possono essere smaltite con i rifiuti domestici. La raccolta e lo smaltimento differenziati di questo tipo di rifiuti contribuisce alla difesa dell'ambiente naturale. L'utilizzatore ha la responsabilità di consegnare l'apparecchiatura usata in un punto di raccolta specializzato, dove sarà preso in consegna gratuitamente. È possibile ottenere informazioni circa tali punti di raccolta presso le autorità locali, o presso il punto vendita.

CONDIZIONI DI GARANZIA. Il produttore fornisce una garanzia per un periodo di 24 mesi, a partire dalla data di acquisto. La garanzia copre esclusivamente i danni derivanti da colpa del produttore cioè i difetti dei materiali e gli errori di montaggio. Non copre i danni conseguenti all'utilizzo improprio del dispositivo, o all'utilizzo del dispositivo a scopi non conformi alla sua destinazione d'uso. Attenzione: ogni tentativo di modifica o di smontaggio del dispositivo che non rientra nell'ambito del normale utilizzo e manutenzione, provoca la perdita della garanzia!

Nel caso venga rilevato un malfunzionamento, è necessario inviare il dispositivo all'indirizzo del venditore o del produttore, insieme alla carta di garanzia compilata. Condizione per il riconoscimento del diritto alla garanzia e la corrispondenza tra la data di produzione impressa sul prodotto e quella indicata sulla carta di garanzia. Le presenti condizioni non escludono, non limitano e non sospendono i diritti dell'acquirente derivanti dalla differenza tra il prodotto e il contratto. La garanzia è limitata unicamente alla riparazione o alla sostituzione del dispositivo stesso. La garanzia non comprende le conseguenze della perdita o della distruzione di qualsiasi altro oggetto.

**GUARANTEE CARD • KARTA GWARANCYJNA
GARANTIESCHEIN • FICHE DE GARANTIE
ГАРАНТИЙНЫЙ ЛИСТ • HOJA DE GARANTÍA
ZÁRUCNÍ LIST • ΕΓΓΥΗΣΗ • JAMSTVENI LIST
GARANCIALAP • GARANTIEBEWIJS
FICHA DE GARANTIA • GARANTIE
GARANTIKORT • ZÁRUCNÝ LIST**



GLOSSY

AQUARIUM SET
ZESTAW AKWARIOWY
AQUARIUM-SET
ENSEMBLE AQUARIUM
АКВАРИУМ НАБОР
CONJUNTO ACUARIO
SET ACQUARIO

CE EAC



Gwarancja jest udzielana na okres dwóch lat od daty sprzedaży i obowiązuje na terenie Unii Europejskiej.

GB PL DE FR RU ES IT

AQUAEL Sp. z o. o.

16-400 Suwałki, Dubowo II 35, Poland
www.aquael.com, e-mail: service@aquael.com

GLOSSY	80	100	120	150	
Tank capacity Pojemność akwarium Fassungsvermögen des Aquariums Capacité d'aquarium Емкость аквариума Volumen de pecera Capacità acquario	l л V B	125	215	260	405
Napiecie Spannung Tension Напряжение Tensión Tensione		220-240			
Frequency Częstotliwość Frequenz Fréquence Частота Frecuencia Frequenza	Hz Гц	50/60			
Light source Źródło światła Lichtquelle Source de lumière Источник света Fuente de luz Fonte di luce		LED			
Lighting power Moc oświetlenia Beleuchtungsstärke Puissance d'éclairage Мощность освещения Potencia de iluminación Potenza di illuminazione	W Вт	2x16	2x16	3x18	3x18
Net weight Masa netto Nettogewicht Poids net Macca netto Peso neto Peso netto	kg кг	27	44	50	92,5
Degree of enclosure protection Stopnie ochrony obudowy Gehäuseschutzzahlen Degrés de protection Степени защиты корпуса Grado de protección de la carcasa Gradi di protezione della scocca	lighting oswietlenia Beleuchtung de luminaria освещения foco di iluminazione		IP68		
	connector łącznika Schalter de connecteur соединительного элемента conector Connettore			IP20	

LIST OF PARTS - WYKAZ CZĘŚCI - TEILELISTE - LISTE DES PIÈCES СПИСОК ДЕТАЛЕЙ - LISTA DE COMPONENTES - ELENCO DELLE PARTI

1	aquarium tank • akwarium • Aquariumbecken • aquarium • аквариум • Pecera •
2	lid • pokrywa • Abdeckung • couvercle • крышка • Tapa •
3	instruction manual • instrukcja obsługi • Bedienungsanleitung • manuel • инструкция по эксплуатации • Manual de uso •



The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Źródło światła znajdujące się w tym urządzeniu może zostać wymienione wyłącznie przez producenta, autoryzowany serwis lub inną osobę posiadającą stosowną kwalifikacją.

Die Lichtquelle, die in dieser Leuchte enthalten ist, soll nur vom Hersteller oder dessen Dienstleister, oder einer ähnlich qualifizierten Person, ausgetauscht werden.

La source de lumière contenue dans ce luminaire ne peut être remplacée que par le fabricant ou son réparateur agréé ou par une personne qualifiée.


Источник света, находящийся в данном светильнике, может быть заменен только производителем, его представителем по сервисному обслуживанию или другим квалифицированным специалистом.

La fuente lumínosa de esta lámpara deberá ser reemplazada únicamente por el fabricante, su personal técnico o personal cualificado equivalente.

La sorgente di luce contenuta in questo apparecchio di illuminazione deve essere sostituita solo dal costruttore o dal suo agente di servizio oppure da una persona qualificata.



REPLACEMENT OF A GLOSSY/LEDY MODULE - WYMIANA MODUŁU GLOSSY/LEDY AUSTAUSCH DES GLOSSY/LEDY MODULS - REMPLACEMENT DU MODULE GLOSSY/LEDY ЗАМЕНА МОДУЛЯ GLOSSY/LEDY - SUSTITUCIÓN DE MÓDULO GLOSSY/LEDY SOSTITUZIONE MODULO GLOSSY/LEDY

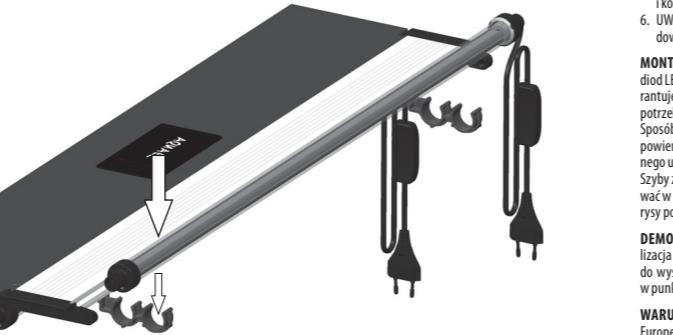

Thank you for purchasing our product. We are confident that you will be satisfied with its operation. Prior to using the device, please read carefully the following instructions to avoid any possible problems.

INTENDED USE AND PROPERTIES. The GLOSSY aquarium sets feature a uniquely shaped tank with elevated walls. A lid with inbuilt lighting is glued to the inside of the upper part of the tank. Thanks to this innovative solution, the aquarium looks like a solid piece of glass with a stylish band at the top. Being a highly original decoration, a GLOSSY aquarium will suit any modern interior.
The lids included with the GLOSSY sets are equipped with inbuilt LED lighting units. The advanced lighting technology ensures the proper growth of aquarium plants and the correct reproduction of colours. The GLOSSY 80 and GLOSSY 100 sets include two energy-saving lighting modules. Two additional modules can be installed if required. The GLOSSY 120 and GLOSSY 150 sets include three energy-saving lighting modules, and another one can be added if required. The use of these modules reduces the costs of lighting by up to 50% and eliminates the need for the frequent replacement of lamps. At the back of the lid, there are special mounting holes for the hassle-free installation of canister filters and other devices. The GLOSSY sets are ideal for planted and biotope aquaria as well as regular mixed aquaria. They are available in four sizes, ranging from 80 to 150 cm in length (capacity of 125 to 405 l). One can also purchase a specially designed aquarium stand to go with a GLOSSY aquarium. The aquarium tank together with the stand will form a compact, stylish body that sparkles with elegance. The GLOSSY WHITE sets are made of highly-transparent OPTI glass glued with white silicone.

SAFETY PRECAUTIONS. The device has been manufactured in full accordance with the currently binding EU safety standards. To ensure safe operation and a long lifecycle of this product, carefully read the following safety rules:

1. The device is meant for use exclusively for the intended purpose and indoors only.
2. The device should only be connected to the mains system whose rated voltage corresponds to that indicated on the device.
3. The non-detachable power supply cord is not replaceable. If the cord is damaged, the device must be discarded.
4. CAUTION: Before performing maintenance on a device placed in an aquarium or a garden pool, unplug or turn off the device.
5. This device can be operated by children who are at least eight years of age, by persons with reduced physical or mental capabilities or persons with no prior experience with the device only under supervision or following an instruction on the safe operation of the device to ensure that the person is aware of any associated risks. The device is not a child's toy! Do not let children to clean or perform maintenance on the device without supervision.
6. CAUTION! Popular chemical agents for aquaria containing malachite green and/or methylene blue may cause permanent discoloration of the silicone used for the manufacturing of GLOSSY WHITE tanks. It is recommended that you do not use such agents.

ASSEMBLY AND MAINTENANCE. The LEDY TUBE lighting modules installed in the GLOSSY aquarium sets employ an advanced LED technology. The powerful LEDs emit light with a colour temperature of 6500 K (SUNNY). The light provides a good living environment for aquatic plants and ensures that the natural colours of aquarium inhabitants are rendered accurately. The PLANT lighting modules, designed especially to suit the needs of aquatic plants, emit light with a colour temperature of 8000 K. They can be purchased separately. The mounting of the lighting module in the aquarium lid is shown in Fig. 2. The module does not require maintenance. If necessary, dust its surface with a clean, dry cloth. Use a soft cloth or sponge, or a special aquarium cleaner to clean the tank walls. Exercise particular caution when cleaning GLOSSY WHITE tanks, made of OPTI glass, since this kind of glass is particularly susceptible to scratching and any scratches that may be caused by improper cleaning are clearly visible on its surface.

DISASSEMBLY AND DISPOSAL. It is forbidden to dispose of used electric and electrical equipment in a trash bin. Segregating and proper utilization of this kind of waste leads to conserving the resources of natural environment. The user is responsible for delivering the used product to a specialized collection point where it will be accepted free of charge. You can obtain information about such a facility at the local authorities at the product seller.

GUARANTEE CONDITIONS. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

DISASSEMBLY AND DISPOSAL. It is forbidden to dispose of used electric and electrical equipment in a trash bin. Segregating and proper utilization of this kind of waste leads to conserving the resources of natural environment. The user is responsible for delivering the used product to a specialized collection point where it will be accepted free of charge. You can obtain information about such a facility at the local authorities at the product seller.

GUARANTEE CONDITIONS. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the guarantee card is a prerequisite for accepting the guarantee. The following warranty conditions do not exclude, limit or suspend user's rights derived from discrepancy of the merchandise with the agreement. The guarantee is limited to repair or replacement of the unit only and does not cover consequential loss or damage to animate or inanimate objects.

GUARANTEE PERIOD. The manufacturer grants a 24 month guarantee beginning on the date of purchase. The guarantee covers defects arising from manufacturer fault i.e. defective materials or assembly errors. It does not cover damage due to user's fault caused by improper handling of the device or using the device for purposes discordant its destination. Attention: any modification or disassembly attempt exceeding normal usage and maintenance cause the guarantee void. In case of noticing improper operation of the device send it with filled out warranty card to the manufacturer or distributor address. The conformity of the production date stamped on the product and written in the